

DRY FIX HIP ACCESSORY KIT INSTALLATION GUIDE



STEP 1
Screw hip batten supports along the hip, in between the batten spaces. They need to be fixed at the eaves and apex, then spaced intermediately between the batten spaces.



STEP 2
Screw a hip batten on top of the hip batten supports. Lay tiles, cutting them neatly along the line of the hip batten, making sure no cut tile is more than 30mm from the hip batten.



STEP 3
Secure the cut tiles using the large and small fixing clips provided:
Large fixing clips – Nail to the batten through the hole, then slide the cut tile into the base of the clip.
Small fixing clips – Clip to the top end of the cut tile, attaching it to the adjoining tile at the interlock.




STEP 4
Starting at the eaves, lay the ridge roll over the batten and secure using the nails provided. Remove the release paper and apply the ridge roll up to the apex and on to the ridge batten (ensure you adhere the butyl strip to the tile profile, but do not crush the corrugation). Ensure the roll on the ridge is lapped over the roll on both hips.



STEP 5
Lay the hip trays centrally over the hip roll, overlapping the next tray approximately 75mm and secure with nails.



STEP 6
Lay a block-end hip tile on the roll, starting at the eaves, mechanically fixing it with a screw and washer. Slide the union into the open end of the tile and slide the next hip tile into the open end of the union. Secure the centre clip in place with the screw and push the outer ratchet clips securely until they lock the tile into place.

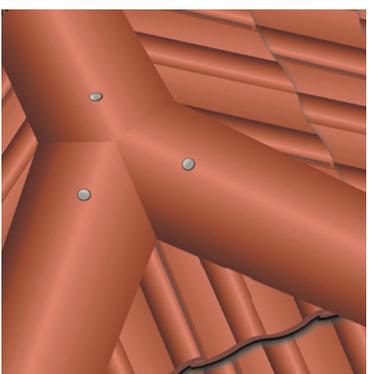

STEP 7
Cut the tiles to form a neat mitre junction at the ridge hip junction. Drill a hole near the mitre and mechanically fix each tile with a screw to the batten.



Unit 12B, Metcalf Drive,
Altham Industrial Estate,
Altham, Lancashire,
England, BB5 5TU


Tel 01282 930680
sales@easy-trim.co.uk
www.easy-trim.co.uk